

User's Manual



PORTABLE STORAGE SERVER

English (EN), French (FR), German (DE), Spanish (ES), Dutch (SE), Italian (IT), Portuguese (PT)

COPYRIGHT INFORMATION

Copyright © 2008 EDS TECHNOLOGIES Europe GmbH. All rights reserved.

EDS TECHNOLOGIES reserves the right to make technical changes. EDS TECHNOLOGIES assumes no liability for damages incurred directly or indirectly from errors, omissions or discrepancies between this product and the documentation.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of EDS TECHNOLOGIES every effort has been made to ensure that the information in this manual is as accurate as possible.

WiDRIVE logo is trademarked.

Other company and product names mentioned herein are trademarks of their respective companies. Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. EDS TECHNOLOGIES assumes no responsibility with regard to the performance or use of these products.

EDS TECHNOLOGIES

Email address: computers.EDS TECHNOLOGIES.edu/options-support

This manual is provided ``as is'' without warranty of any kind, express or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall EDS TECHNOLOGIES, its directors, officers, employees or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of use or data, interruption of business and the like), even if EDS TECHNOLOGIES has been advised of the possibility of such damages arising from any defect or error in this manual or product.

TABLE OF CONTENT

1. INTRODUCTION	1	8. TECHNICAL SPECIFICATIONS	9
1.1 WiDRIVE Overview	1	9. REGULATORY INFORMATION	10
1.2 Data Access	1		
1.3 Indicators and Switches	2		
2. GETTING STARTED	3		
2.1 STEP 1: Check for supplied items	3		
2.2 STEP 2 : Connecting WiDRIVE for the FIRST time	3		
2.3 STEP 3 : Installing WiDRIVE Utility	3		
3. WiDRIVE CONFIGURATION	4		
3.1 WiDRIVE Presets	4		
3.2 WiDRIVE Setup Wizard	4		
3.3 WiDRIVE Connect Utility	4		
3.4 WiDRIVE Control Panel	4		
3.5 Selecting Network Type	4		
3.5.1 Infrastructure Network Setup	4		
3.5.2 Base Network Setup	4		
3.6 Data Access Mode	4		
3.7 Setting Passwords	4		
3.8 Maintenance Menu	4		
3.8.1 Firmware Upgrade	4		
3.8.2 Application Upload	4		
3.8.3 Hard Drive Format	4		
3.8.4 Hard Drive Repair	4		
3.8.5 WiDRIVE Reboot	4		
3.8.6 WiDRIVE Shutdown	4		
3.8.7 Factory Reset	4		
3.9 Status Menu	4		
3.9.1 WiDRIVE Status	4		
3.9.2 Software Status	4		
3.9.3 Connected PC/Device	4		
4. WEBFOLDER MODE	5		
4.1 Making AP Connection	5		
4.1.1 Connecting WiDRIVE (AP Network)	5		
4.2 Making Infrastructure Connection	5		
4.2.1 WiDRIVE Preparation (Infrastructure Network)	5		
4.2.2 Connecting WiDRIVE (Infrastructure Network)	5		
4.3 Connecting WiDRIVE's WebFolder	5		
4.4 WebFolder Sharing	5		
4.5 WebFolder Menu	5		
4.5.1 WebFolder Information Panel	5		
4.5.2 WebFolder Application Menu	5		
4.5.3 WebFolder Folder Region	5		
4.6 WebFolder Operation	5		
4.7 WebDAV mode	5		
5. TORRENT	6		
5.1 Torrent Client	6		
5.2 Torrent Client Configuration	6		
5.3 Torrent File Upload	6		
5.4 Torrent Status	6		
6. QUESTIONS & ANSWERS	7		
7. SAFETY AND CARE	8		

1. INTRODUCTION

Welcome and thank you for choosing a EDS TECHNOLOGIES product.

For your convenience, your EDS TECHNOLOGIES product is furnished with two guides:

- a) a Quick Start Guide, and
- b) This comprehensive PDF User's Manual.

1.1 WiDRIVE Overview

o WiDRIVE is a pocket-size portable wireless storage server that is accessible through 802.11b/g WLAN interface. It provides up to 54Mbps bandwidth based on WLAN networks operating at 2.4 GHz frequency band.

o With WiDRIVE, consumers can enjoy the ease and mobility of wireless lifestyle in accessing and sharing their digital content without the hassle of cables.

o A wireless network connection to WiDRIVE can be secured by one of encryption types, i.e. WLAN 64-bit, 128-bit WEP, WPA or WPA2. Prior to the connection to a host, the verification of username and password will be provided for authentication.

o There are two types of wireless networks, Access Point (AP) and Infrastructure mode. WiDRIVE operates easily in both types of wireless networks.

o In AP mode, WiDRIVE acts as a Wireless Router and a DHCP server that assigns IP addresses to hosts that join the wireless network.



AP mode is normally used under condition when there is no available Wireless Router.

o In Infrastructure mode, WiDRIVE will join Wireless Routers automatically to obtain the necessary IP address.



Infrastructure mode is used when there is an existing or available Wireless Router where all wireless Notebooks/PCs are connected to. WiDRIVE can be configured to automatically join the wireless network


o The manual configuration of IP addresses for both WiDRIVE and host can be avoided during the transition of wireless network types.

1.2 Data Access

o WiDRIVE offers two mode of data access, the USB mode and WebFolder mode.


o In USB mode, WiDRIVE is behaved as an external storage device.

o In WebFolder mode, WiDRIVE appears to the connected computer as a web-based file manager.

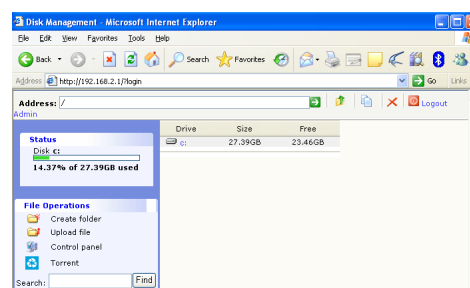

WiDRIVE enables users from different hardware platforms (PC, PDA, PSP, Set-top box, etc) to share the content at WebFolder mode.

o WiDRIVE operates in both USB mode and WebFolder mode.

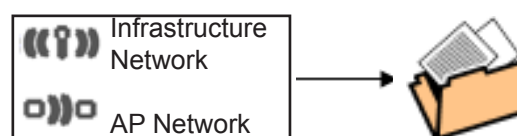

1.3 Indicators and Switches

1. INTRODUCTION

- o The diagram below shows the LEDs and Switches on WiDRIVE:



WiDRIVE



Adapter

- Power indicator LED
- Activity indicator LED
- Factory reset button
- USB 2.0 high speed data port
- DC power charge port
- Power ON/OFF button
- Network Type Selection switch (AP/Infrastructure)
- Wall power adapter
- USB cable

- o Power Indicator LED A is status indicator for charging:
- o Activity Indicator LED B is the status indicator for data transfer. The BLUE indicator light will commence flashing during data transfer or communication.

- o The Power ON/OFF button D near the upper

left corner of WiDRIVE is to switch on and off WiDRIVE

- o When booting up, the Power Indicator LED A will stay ORANGE in color until WiDRIVE completes its booting process and ready for operation. If successfully boot up, the Power Indicator LED A will turn to GREEN color. The Power Indicator LED A will also turn to ORANGE color during shutdown and factory reset.
- o The Network Type Selection switch E near the lower left corner of WiDRIVE is to select the wireless network type (AP/Infrastructure).



- o Refer to the figure above for further details.

2. GETTING STARTED

2.1 STEP 1: Check for supplied items

WiDRIVE portable storage server
Quick start guide
Power adapter
USB cable
Carrying pouch

2.2 STEP 2 : Connecting WiDRIVE for the FIRST time

AP mode:


Make sure that WiDRIVE is power off.
Switch to AP mode.



Power on WiDRIVE.
Now WiDRIVE behaves like a wireless router.

Connect WiDRIVE with windows XP:

Open windows zero configuration tool.
1. Control Panel -> internet connection
2. Left click on wireless adapter icon.

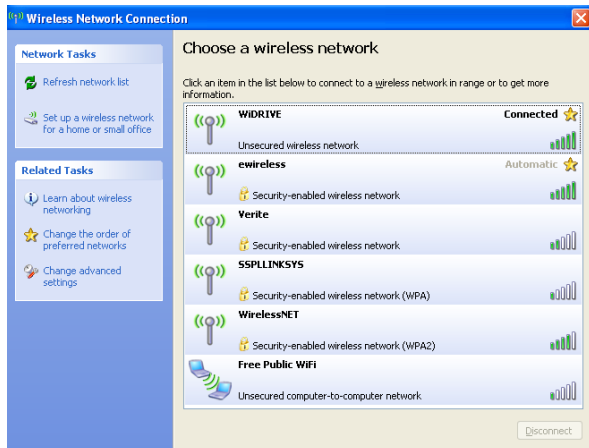

Select on "WiDRIVE" to connect.

Login WiDRIVE:

Open browser with: <http://192.168.2.1>

Infrastructure mode:

Make sure that WiDRIVE is power off.
Switch to infrastructure mode.



Power on WiDRIVE.
Now WiDRIVE connects to a wireless router which you had defined in AP mode before.

Connect WiDRIVE with windows XP:

Connect devices like PC to the same router.
Search WiDRIVE by using *utility.

Login WiDRIVE:


Open browser and type in the searched IP address to log in.

*utility: please refer to following chapters for details.

2.3 STEP 3 : Installing WiDRIVE Utility

Setup program can be found in HDD or download from official website. Please install utilities with following steps:

Double click the setup icon.
Follow instructions to install software.

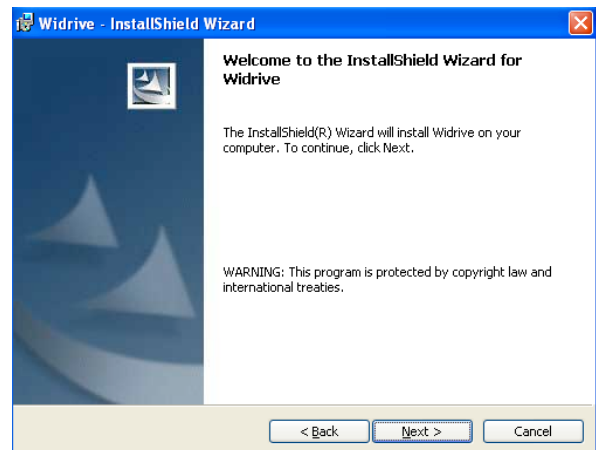

Two utilities will be available includes:
1. WiDRIVE Setup Wizard.
2. WiDRIVE Connection Utility.

The first one is used to quickly configure basic settings within WiDRIVE, and another one is used to discover WiDRIVE when in infrastructure mode.

3. WiDRIVE CONFIGURATION

3.1 WiDRIVE Presets

WiDRIVE comes pre-configured from the factory with the following settings:

IP Address	: 192.168.2.1
Subnet Mask	: 255.255.255.0
Wireless Channel	: 10
SSID	: WiDRIVE
Security	: none
WEP/WPA Key	: none

These factory settings can be changed.

Admin Username	: Admin
Admin Password	: admin
Guest Username	: Guest
Guest Password	: guest

3.2 WiDRIVE Setup Wizard

WiDRIVE Setup Wizard provides step-by-step configuration of WiDRIVE in both AP mode and Infrastructure mode.

3.3 WiDRIVE Connect Utility

WiDRIVE Connect utility will launch a Web-browser and have it automatically open a specified URL by fetching WiDRIVE's IP address. After a few seconds, you should see a login screen similar to the following:

There is a dropdown menu for the username field in the login screen. Select Username ("Admin") and type Password (factory configured password "admin") then click "Login".

If the device has not been configured, use the default admin password. You will later want to change the Password entries from the default (admin) to something else.

3.4 WiDRIVE Control Panel

To configure the device through the web-browser, enter the IP address of the device (default: 192.168.2.1) into the address bar of the web-browser and press Enter.

Click on the Control Panel link on navigation menu on left of WebFolder window. You will then see six panels: Status, Login, Base Network, AP Profile, Maintenance, and Help. Each panel is described below.

3.4.1 Status

The Status panel displays runtime status. This includes details about the hard drive, wireless, TCP/IP configuration, SSID, Time Zone, Torrent, UPnP portmap, Port status and connected PC/device, etc.

To change the time zone, click Change button, choose your local time zone and click Save. The current time of selected time zone will be shown in the Status window.

The Torrent Client status is ON when Torrent is up and running, OFF when Torrent is not running in the AP mode and Need Install if Torrent software is missing.

WiDRIVE Connection Utility requires the UPnP discovery protocol to enable discovery of WiDRIVE on the network.

Click on the 'MAP' button to map Incoming packet's port number to the local computer with IP address.

On connected PC/device, make sure the device is connected to your computer.

3.4.2 Login

The Login panel is where the administrator defines the Admin and Guest accounts, and Dynamic DNS Access.

The WiDRIVE Access option allows you to change an admin's password and guest's password. Enter the new password in the two fields and press the Apply button. The password can be up to 12 characters.

The Dynamic DNS Access option allows you to set the DNS server. You may sign up Dynamic DNS service at <http://www.dyndns.org> and there you can also register "domain names".

Domain Name: Enter one domain name you have registered.

User Name: Enter the username used for sign-up.

Password: Enter the password used for sign-up.

External Port: Set the port number from 1025 to 65535.

Check the "Disabled" radio button to disable the Dynamic DNS service.

3.4.3 Base Network Setup

Click on the Basic Network tab on the Control Panel. Using this page you may configure the the IP address of the device as well as channel, and SSID.

Base Network IP Address: Enter the IP address of the device.

Subnet Mask: Enter the subnet mask for the IP address.

SSID: The SSID is a unique named shared amongst all the points of the wireless network. The SSID must be identical on all points of the wireless network and cannot exceed 32 characters.

Channel: Select a channel from the drop-down list. The channels available are based on the country's regulation.

On the Security option you can configure the authentication and encryption settings such as WEP 64, WEP 128, WPA, and WPA2.

Security: Select Disable radio button if your wireless network does not use any type of encryption, WEP 64, WEP 128, WPA, or WPA2 radio button if your wireless network uses this encryption.

Create the encryption keys depending on the type of encryption you choose.

WEP Key (HEX): 64bit-hex keys require 10 characters, where as 128-bit keys require 26 characters. A hex key is defined as a number between 0 through 9 and letter between A through F.

Click on the Apply button to confirm the changes and then click on the OK button on the Success dialog to return to the pervious window. The countdown timer will start at 50 secs once these changes have been applied.

3.4.4 Infrastructure Network Setup

Select Infrastructure mode, enter SSID, select WEP Encryption to be 64 bits or 128 bits depending on your wireless router/AP setting. Enter the exact same KEY that your used for the wireless router/AP. Select Obtain IP From AP or enter static IP address based on your network plan. Press "Save".

This setup shows the stored Access Point profiles. There are three APs can be stored in this list.

Radio button menu: Obtain IP From AP or Specify Fixed IP

By selecting Specify Fixed IP one has to enter the IP address of your selected AP.

Fixed IP Address: Enter the IP address of the device. When Mode is set to Obtain IP From AP, this field is read-only and reports the device's current IP address.

Subnet Mask: Enter the subnet mask for the IP address. When Mode is set to Obtain IP From AP, this field is read-only and reports the device's current subnet mask.

Specify the SSID of a specific wrieless LAN you wish to connect to. Change the SSID in the network name field to your new identifier name.

SSID: Enter a Network Name (between 1 and 32 characters long) for the wireless network. You must configure each wireless client to use this name as well.

Security: Select Disable radio button if your wireless network does not use any type of encryption, WEP 64, WEP 128, WPA, or WPA2 radio button if your wireless network uses this encryption.

Create the encryption keys depending on the type of encryption you choose.

WEP Key (HEX): 64-bit hex keys require 10 characters, where as 128-bit keys require 26 characters. A hex key is defined as a number between 0 through 9 and letter between A through F.

Save the settings to complete the change of the wireless router SSID. The new settings have been activated.

3.4.5 Maintenance Menu

There are nine items under the Maintenance section: Firmware Version, Firmware Upgrade, Application/Language Pack Upload, Factory Default Settings, Hard Drive Format/Repair, and Reboot and Shutdown.

3.4.5.1 Firmware Upgrade

Click on the Browse button and then select the appropriate firmware and then click on the Upload button. Make sure that downloaded the appropriate firmware from your vendor.

Note: The upgrade process may take about several minutes to complete. Do not power off the device during this process as it may crash the device and make it unusable. The device will restart automatically once the upgrade is complete.

3.4.5.2 Application Upload

Click on the Browse button and then select the appropriate application and then click on the Upload button.

3.4.5.3 Language Pack Upload

Click on the Browse button and then select the language to add and then click on the Upload button.

3.4.5.3 Hard Drive Format

You'll format (only 1 partition: 100% of the hard drive) or split the hard drive (50:50, 25:75 or 75:25) in place of the list of the partitions. You may need to wait for some minutes as it takes time to format the hard drive.

CAUTION: This operation will completely erase all data stored on the HDD.

3.4.5.4 Hard Drive Repair

Click the 'Repair' button. This will start the process of verifying and repairing, if necessary, the hard drive volume.

3.4.5.5 WiDRIVE Reboot

Click on the 'Reboot' button to reload the device. Wait several minutes for the device to reboot.

3.4.5.6 WiDRIVE Shutdown

Click on the 'Shutdown' button to perform a soft shutdown.

3.4.5.7 Factory Reset

Click on the Reset button to reset the device to its factory default settings.

Note: The reset process may take about several minutes to complete. Do not power off the device during this process as it may crash the device and make it unusable. The device will restart automatically once the reset is complete.

3.5 Return to WebFolder

In the navigation toolbar (top), click WebFolder. A new browser window will open.

4. WEBFOLDER MODE

4.1 Making AP Connection

To connect WiDRIVE in AP Network:

1. Ensure battery is fully charged.
2. Switch Network Type to AP Network.
3. Power on the device.
4. Select and join Wireless Network on PC (Preset SSID: WiDRIVE).
5. Launch web browser and key in IP address (Preset IP: 192.168.2.1).
6. Select user "Admin" and type in password "admin" (case sensitive).
7. Select [C] folder and use WebFolder.

4.2 Making Infrastructure Connection

To connect WiDRIVE in Infrastructure Network (following previous steps on connecting via AdHoc network):

1. After the login screen, select Control Panel.
2. Select [Infrastructure] Tab and key in necessary network profile for base station/router.
3. Switch Network Type to Infrastructure.
4. Click on 'Apply' button to restart WiDRIVE with new settings.
5. On user's PC, join wireless network of base station. In infrastructure mode, WiDRIVE's preset IP is not used. The IP address is now issued and controlled by the base station or router.
6. To discover IP address of WiDRIVE, use WiDRIVE Connection Utility.
7. Once IP address is known, web browser can be used for standard login procedure.

4.3 Connecting WiDRIVE's Web-Folder

The Web interface is displayed once you have logged in. The navigation menu on left is divided into two main sections:

Status: This includes details about the hard drive.

File Operation: This includes Create Folder, Upload File, Control Panel, and Torrent and File Search.

The Web interface has the following components:

4.4 WebFolder Menu

The WebFolder is a Web-browser graphical user interface (GUI) that provides a structured approach to monitor, configure, and control the operation of WiDRIVE.

The folder hierarchy is an organizational structure of one or more folders in WiDRIVE. Folder hierarchies organize the repository so that users can browse through it easily.

4.5 WebFolder Operation

4.5.1 Working with Folders

You can create and populate folders using the Web interface.

To open a folder, click its icon or file name in the File List.

You can also use the Directory Tree to navigate up or down your file hierarchy. (HINT: users can directly type in the path in the Address input too)

To create a folder:

1. Navigate to the folder in which you want to create your new folder.
2. Click the Create a New Folder icon  and choose Folder.
3. In the dialog, type the name for your new folder.
4. Click OK.

To rename a folder:

1. In the File List, click the Rename icon  to the right of the folder.
2. Type the new name for the folder.
3. Click OK.

To copy/move a folder:

1. Navigate to the parent folder of the folder you want to copy or move.
2. In the File List, click the Select checkbox to the left of the folder.
3. Finalize the selection by clicking on the File Select button  in the toolbar.
4. Navigate to the folder where you want to paste the folder.

5. Click the Copy icon  or Move icon  to place the selected folders in the desired folder.

Copying a folder in this way makes a second copy of the folder and all its contents. Moving a folder in this way relocates the folder in a single location.

To delete a folder:

1. Navigate to the parent folder of the folder you want

to delete.

2. In the File List, click the Select checkbox to the left of the folder.

3. Click the Delete icon .

4. In the confirmation dialog, click OK to delete the folder.

4.5.2 Working with Files

Uploading Files

There are two options for uploading a file using the Web interface. Using the Upload command, you can either upload one file at a time using a file browser window, or you can drag and drop several files at once.

To upload using a standard system file browser:

1. Navigate to the folder where you want to store the file.

2. Click the Upload File icon  and choose Via browse.

3. In the Upload window, click the Browse button.

4. Locate the file you want to upload and click Open.

5. In the Upload window, click the Upload File button. The file is added to the File List.

To copy a file:

1. Navigate to the parent folder of the folder you want to copy or move.

2. In the File List, click the Select checkbox to the left of the folder.

3. Finalize the selection by clicking on the File Select

button  in the toolbar.

4. Navigate to the folder where you want the copied file(s) to appear (which could also be the current folder).

5. Click the Copy icon  to place the selected folders in the desired folder. If a file by that name already exists, WiDRIVE appends the words "Copy of" to the name of the file.

To move a file:

1. In the File List, click the Select checkbox to the left of the file(s) you want to move.

2. Finalize the selection by clicking on the File Select

button  in the toolbar.

3. Navigate to the folder to which you want to move the file.

4. Click the Move icon  to place the selected folders in the desired folder. If a file by that name already exists, WiDRIVE appends the words "Copy of" to the name of the file.

To delete a file:

1. Navigate to the parent folder of the folder you want to delete.

2. In the File List, click the Select checkbox to the left of the file(s) you want to delete.

3. Click the Delete icon .

4. In the confirmation dialog, click OK to confirm the delete.

To change the name of a file:

1. In the File List, click the Rename icon  to the right of the file(s) you want to rename.

2. Type the new name for the file.

3. Click OK to save the file with the new name.

4.5.3 Managing Access to Folders

The content access rights at files and folders will depend on the privileges assigned to this user. As a rule, these rights are assigned by the creator or owner of an object (directory or file). As the owner of any folders or files you create, you can control who can access them and the level of access permitted. Only the administrator can change the access rights at files and folders. The files and folders will inherit the same rights as the parent folder.

The following access control list is invoked:

The green colour for full access, amber colour for read-only access and red colour for restricted access to the files and directories.

To change the content access rights at files and folders:

1. In the File List, click the Access Rights icon to the right of the file(s) you want to change.

2. An Access Rights icon appears in the Action column of the file(s) you changed.

4.6 WebDAV mode

5. TORRENT

5.1 Torrent Client

5.2 Torrent Client Configuration

5.3 Torrent File Upload

5.4 Torrent Status

6. QUESTIONS & ANSWERS

Q1: I cannot detect WiDRIVE on computer's wireless network connection. What could be the cause?

A1: This could be due to a weak wireless signal or interference from other devices (radio, cordless phone, microwave oven, etc).

Do check that the WiDRIVE is operating in AP mode. A computer will not be able to detect if WiDRIVE is switched to Infrastructure mode.

To ensure a good wireless signal, you may place WiDRIVE closer to your computer and make sure no metallic obstruction is blocking the embedded antenna.

You may also try renewing the wireless network connection on your computer and starting a new network scan. This can be done by selecting [Repair] option on the Windows's Wireless Network Connection.

Q2: I am connected to the WiDRIVE's network but unable to access it. What should I do?

A2: Check that you do not have a conflicting wired network connection. If there is a wired network connection, ensure its IP address is not on the same IP subnet as the IP address of WiDRIVE. To change the IP address or subnet of WiDRIVE, you can follow instructions in Section 3.4.

Q3: My WiDRIVE is connected. I can key in the IP address of WiDRIVE in the web browser and make connection. However, WiDRIVE Utility indicates that it is not connected. Is WiDRIVE Utility broken?

A3: This may be caused by the firewall that blocks the UPnP discovery protocol on WiDRIVE. Please consult the firewall provider on opening the firewall for the UPnP discovery protocol.

The UPnP server is run on the internal hard drive of WiDRIVE. Please ensure that you have the UPnP server uploaded into the hard drive. You can determine the status of the UPnP through the Control Panel of WiDRIVE.

If the UPnP installation is not found, please upload it from www.edslab.com through the Control Panel of WiDRIVE.

Q4: How do I find out the IP address of WiDRIVE?

A4: WiDRIVE Connect Utility will search and detect for any WiDRIVE that is attached to the same network that the PC is connected to. When WiDRIVE is detected, WiDRIVE Connect Utility will display the IP address of WiDRIVE.

Q5: How do I find out WiDRIVE's IP address without using the WiDRIVE Utility?

A5: To determine the IP address of WiDRIVE when operating in AP mode, use the command 'ipconfig/all' at the command prompt. The IP address of DHCP Server reported by ipconfig belongs to WiDRIVE.

Q6 : I am getting very slow data transfer. How do I improve the speed?

A6 : When many users simultaneously accessing WiDRIVE, the performance will be affected as the wireless bandwidth is shared among users. Please try to switch from Infrastructure network to AP network. (In general, the data throughput between two devices in an AP network is twice of that in an Infrastructure network)

Q7: I forgot the Admin Username and Password for WiDRIVE. Please help me!

A7: You can restore WiDRIVE to its original factory condition by powering up WiDRIVE and then pressing the reset button using a paper clip.

Q8: Why is WiDRIVE enclosure made of plastic?

A8: Wireless signal can be obstructed by metallic material. To ensure proper signal from the embedded antenna, WiDRIVE is manufactured using superior plastic and craftsmanship.

Q9: The Torrent does not seems active, always shows zero upload and download speed.

A9: Please try to change the Torrent Port number used. If you Internet Router support UPnP or NAT, you may wish to enable the Torrent auto check if you are connected to the same wireless network as WiDRIVE. If you are running the WiDRIVE Utility, click on [Scan] to confirm you have a connection to WiDRIVE.

7. SAFETY AND CARE

Please read the following safety information prior to using WiDRIVE.

- o Only qualified personnel should service WiDRIVE. Faulty installation or service may be dangerous and may invalidate any warranty applicable to WiDRIVE.
- o Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as WiDRIVE.
- o Switch your WiDRIVE off before boarding an aircraft. The use of wireless devices in aircraft may be dangerous to the operation of the aircraft, and is illegal.
- o Switch your WiDRIVE off when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks can cause an explosion or fire resulting in bodily injury or even death.
- o WiDRIVE can cause interference to pacemakers, hearing aids, and medical equipment. Maintain safe distances from medical devices when operating in such environments.
- o Use only supplied battery packs and charger come with WiDRIVE to avoid electrical damage, explosion, or chemical leak.
- o Do not drop or knock WiDRIVE. Rough handling can damage the electronics board and hard drive in WiDRIVE.
- o Do not expose WiDRIVE to extreme temperature. Do not put WiDRIVE on heating devices such as microwave oven, stove, or radiator. The device may explode when overheated.
- o Clean WiDRIVE surface with soft damp cloth. Do not use any cleaning agent.
- o Keep WiDRIVE dry. Any precipitation, humidity, and liquids can corrode electronic circuits in WiDRIVE.

8. TECHNICAL SPECIFICATIONS

Dimensions

Size: 120mm x 78mm x 29mm

Weight: 300g

Wireless Interface:

Standard: IEEE 802.11b & 802.11g standards

Frequency Band: 2.412GHz – 2.472GHz ISM BW

Modulation Technology: 802.11b: CCK, DQPSK, DB-PSK; 802.11g: OFDM

Data rate: Up to 54Mbps

Mode: AP, Infrastructure

Range: Up to 30m

Security Features:

Wired Equivalent Privacy (WEP) 64/128 bit encryption, WPA/WPA2 PSK

Username and password protected access

Internal Storage

Capacity: Prevailing market HDD capacity

Form Factor: 1.8" HDD

Interface: IDE/ATA

Acoustics (20GB typical): Idle 2.0 Seek 2.6 (A-Weighted Sound Power (Bels))

LED indicator

Tri Color LED Indicator

Activity-Flashing Blue

Standby or Charging -Still Orange

Lower power-Flashing Orange,

Button/Switch: On/Off, AP/Infrastructure selection

Power

AC source: 110/230V 50/60HZ

DC source: 5V +/- 5%

System Requirements

WinXP SP2 and above

Pentium III or higher with 128MB RAM

802.11 interface

Environment

Operating temperatures: 5 to 40 C

Storage temperatures: -10 to 50C

Relative humidity: 5% to 90%

Shock operational: 300G or less (2ms, half sine wave)

Non-operational: 1000G or less (1ms, half sine wave)

9. REGULATORY INFORMATION

Need help?

For the latest driver updates, user manuals & FAQs please have a look at the EDS TECHNOLOGIES options & services support page:

Computers.EDS TECHNOLOGIES.eu/options-warranty

For the EDS TECHNOLOGIES hotline numbers

CE compliance

This product is CE marked in accordance with the requirements of the applicable EU Directives. Responsible for CE marking is EDS TECHNOLOGIES Europe GmbH, Hammfelddamm 8, 41460 Neuss, Germany. A copy of the official Declaration of Conformity can be obtained from following website: <http://epps.EDS TECHNOLOGIES-teg.com>.

Working Environment

The Electromagnetic Compliance (EMC) of this product has been verified typically for this product category for a so called Residential, Commercial & Light Industry Environment. Any other working environment has not been verified by EDS TECHNOLOGIES and the use of this product in these working environments is maybe restricted or cannot be recommended. Possible consequences of the use of this product in non verified working environments can be: Disturbances of other products or of this product in the nearby surrounding area with temporarily malfunction or data loss/corruption as result. Example of non verified working environments and related advices:

Industrial environment (e.g. environments where a mains voltage of 380V three-phase is being used mainly): Danger of disturbances of this product due to possible strong electromagnetic fields especially near to big machinery or power units.

Medical environment: The compliance to the Medical Product Directive has not been verified by EDS TECHNOLOGIES; therefore this product cannot be used as a medical product without further verification. The use in usual office environments e.g. in hospitals should be no problem if there is no restriction by the responsible adminis-

This product is not certified as a medical product according to the Medical Product Directive 93/42 EEC.

Automotive environment: Please search the owner instructions of the related vehicle for advices regarding the use of this product (category).

Aviation environment: Please follow the instructions of the flight personnel regarding restrictions of use.

Additional environments not related to EMC

Outdoor use: As a typical home/office equipment this product has no special resistance against ingress of moisture and is not strong shock proofed.

Explosive atmosphere: The use of this product in such special working environment (Ex) is not allowed.

9. REGULATORY INFORMATION

Text for WEE

Text WEEE & Battery : for option with battery

Following information is only valid for EU-member States:

Disposal of products



The crossed out wheeled dust bin symbol indicates that products must be collected and disposed of separately from household waste. Integrated batteries and accumulators can be disposed of with the product. They will be separated at the recycling centres.

The black bar indicates that the product was placed on the market after August 13, 2005.

By participating in separate collection of products and batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.

For more detailed information about the collection and recycling programmes available in your country, please visit our website (<http://eu.computers.EDS-TECHNOLOGIES-europe.com>) or contact your local city office or the shop where you purchased the product.

Disposal of batteries and/or accumulators



Pb, Hg, Cd

The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste.

If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol.

By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.

For more detailed information about the collection and recycling programmes available in your country, please visit our website (<http://eu.computers.EDS-TECHNOLOGIES-europe.com>) or contact your local city office or the shop where you purchased the product.

© 2008 EDS TECHNOLOGIES Europe GmbH
All rights reserved

EDS TECHNOLOGIES reserves the right to make technical changes. EDS TECHNOLOGIES assumes no liability for damages incurred directly or indirectly from errors, omissions or discrepancies between this prod-